

Contents

 
Package Contents	3
Overview	4
Important Safety Notice	6
Batteries	6
Children	8
Operating Environment	8
Maintenance and Care	8
Intended Use	9
Danger Through Noise Disturbance	10
Conformity	10
Disposal of Old Devices	11
Introduction	12
Inserting the Batteries	12
Connecting the Headphones	12
Using the Device	13
Powering On and Adjusting the Volume	13
Tuning a Radio Station	13
Setting the Time	14
Setting the Alarm Clock	15
Enabling the Alarm	16
Appendix	17
Copyright	17
Technical Specifications	17
Details of Guarantee	19

Package Contents




- 1 Scanradio SUSR 17 A1 with strap
- 2 Earphones
- 3 2 batteries (1.5V, size AAA)
- 4 User manual with service information (not illustrated)

Overview

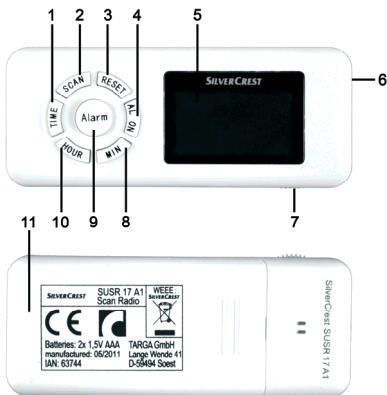

 - 1 TIME (to set the time)
- 2 SCAN (to search a radio station)
- 3 RESET (to reset the unit)
- 4 AL ON (to enable/disable the alarm)
- 5 Display
- 6 Earphones jack (on the side)
- 7 On/Off switch and volume control
- 8 MIN (to set the minutes)
- 9 Alarm (to set the alarm time)
- 10 HOUR (to set the hours)
- 11 Battery compartment (back panel)

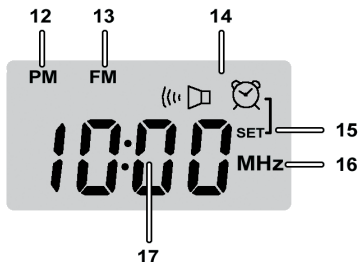

- 12 Post-meridian icon for clock and alarm clock
- 13 Radio mode icon
- 14 Alarm enabled icon
- 15 Alarm programming mode icon
- 16 Frequency unit for radio reception
- 17 Frequency, clock or alarm time display

Important Safety Notice



This icon denotes important information for the safe operation of the product and for the user's safety.



This symbol denotes further information on the topic.

Before you use this device for the first time, please read the following notes in this manual and heed all warnings, even if you are familiar with handling electronic devices. Keep this manual safe for future reference. If you sell the device or pass it on, it is essential you hand over this manual also.



Batteries

Insert the batteries / rechargeable batteries respecting the polarity. Never attempt to recharge non-rechargeable batteries or open any type of battery. Do not throw batteries into fire, as they may explode. Do not mix batteries (old and new or carbon and alkaline, etc.). If you will not be using the device for a long period of time, remove the batteries and store the device in a dry and dust-free place. Non-intended use may cause explosion as well as battery leakage. If the batteries

leak, use gloves and clean the device thoroughly with a dry cloth.



Always make sure that:

- no direct heat sources (e.g. heating) can affect the device;
- no direct sunlight or bright artificial light reaches the device;
- contact with sprayed and dripping water and abrasive liquids must be avoided and the device should never be operated near water. It must especially never be immersed (do not place any recipients containing liquids such as beverages, vases, etc. onto or next to the device);
- the device is never placed in the immediate vicinity of magnetic fields (e.g. loudspeakers);
- no fire sources (e.g. burning candles) are placed on or near the device;
- no foreign bodies are introduced into the device;
- the device is not subject to any great temperature changes as this may cause moisture through condensation and short-circuit;
- the device is not subject to excessive shocks and vibrations;



Children

Electrical appliances do not belong in the hands of children! Do not allow children to use electrical devices when not under supervision. Children may not comprehend the presence of potential risks. Small parts can represent choking hazards. Keep the packaging away from children too as there is danger of suffocation. Batteries and rechargeable batteries can represent choking hazards. Keep batteries out of reach of children. If a battery is swallowed, seek medical help immediately.

Operating Environment

The device is not for use in environments with a high temperature or humidity (e.g. bathrooms), and must be kept free of dust. Operating temperature and operating humidity: 5 °C to 35 °C, max. 85 % RH.

Maintenance and Care

Servicing is required when this device has been damaged in any way, for example, when the device housing is damaged, when liquids or objects have entered the device or when the product has been exposed to rain or moisture. Servicing is also necessary when the product does not perform normally or when it has been dropped. If smoke, unusual noises or smells are noticed, power off the device immediately. In this case the device should not be used further and should

be inspected by authorized service personnel. Please contact qualified personnel when servicing is needed. Never open the housing of the device. Only use a clean, dry cloth for cleaning. Never use any corrosive liquids. Do not attempt to open the housing of the device otherwise you will void your warranty.

Intended Use

This is a consumer electronics device. It has been designed to receive radio broadcasting stations. It may only be used for private use, not industrial or commercial purposes. Furthermore, the device may not be used in tropical climates. Only connection cables and external devices may be used that comply with safety standards and the electromagnetic compatibility and shielding quality of this device. This device fulfils all that relates to CE Conformity, relevant norms and standards. Any modifications to the equipment other than recommended changes by the manufacturer may result in these directives no longer being met. The manufacturer is not liable for any damage or interference caused by unauthorized modifications. Only use the accessories recommended by the manufacturer. If you are not using the device within the Republic of Germany, you must observe the regulations and laws in the country of use.

Danger Through Noise Disturbance



Caution when using headphones. Listening at high volume can harm the user's auditory system.

Conformity



This device complies with the basic and other relevant requirements of the EMC Directive 2004/108/EC.

For more information about the Conformity of this product, please visit our website www.service.targa.co.uk. The Declaration of Conformity can also be found at the end of this User's Manual.

Disposal of Old Devices



If the product is labelled with a crossed-out waste bin, it is subject to the European Guideline 2002/96/EC.



All electric and electronic devices must be disposed of separately from household waste at established bodies. With the proper disposal of old devices you avoid damage to the environment and your personal health. For further information about proper disposal, contact your local government, disposal bodies or the shop where you bought the device.

Respect the environment. Old batteries do not belong in with domestic waste. They must be handed in to a collection point for old batteries.

Also recycle the packaging material properly. Cardboard packaging can be taken to paper recycling containers or public collection points for recycling. Any films or plastic contained in the packaging should be taken to your public collection points.

Introduction

Thank you for choosing a SilverCrest product.

This scan radio receiver offers simple and convenient radio listening. Via the one-touch button functionality you can easily toggle to the next available station.

Inserting the Batteries

Insert the supplied batteries. Open the battery compartment cover on the back panel of the device by sliding it in the direction of the printed arrow. Insert the batteries with the correct polarity (+ and -). The correct polarity is labelled on the batteries and inside the battery compartment. Next close the battery compartment cover.

If the output volume weakens or the device fails to respond, replace the batteries with new batteries of the same type. The device will not inform you about weak batteries.

Connecting the Headphones

Insert the jack-type plug of the supplied headphones into the headphones receptacle (6) on the side panel of the unit.

Using the Device

Powering On and Adjusting the Volume

- Rotate the volume adjustment knob (7) counter-clockwise, to power the radio on. This will adjust the audio volume at the same time. Turn the volume adjustment knob counter-clockwise to increase the sound volume, or turn it clockwise to lower the volume.
- Turning the volume adjustment knob clockwise as far as it goes will power the device off.

Tuning a Radio Station



To be able to receive any radio stations, the supplied headphones must be connected to the headphones receptacle. The cable of the headphones is used as antenna.

- Use the volume adjustment button (7) to set the desired sound volume.
- Press the SCAN button (2) to launch an automatic station search. As soon as a station has been found, the scan will stop and the radio programme can be listened to.
- To switch to a different station, press the SCAN button (2) again. The next available station will be searched for.

- The scan is always performed up to the end of the frequency band. To launch a scan from the beginning of the frequency band, press the RESET button (3).

Setting the Time

The time can only be set while the device is powered off. If it is still powered on, power the device off by using the volume control knob (7).

- Press and hold the TIME button (1).
- Then press the HOUR button (10) repeatedly to set the hour. You can also keep the HOUR button (10) pressed down to accelerate the digit adjustment. To distinguish ante meridian (morning) and post meridian (afternoon) time, "PM" will display for post meridian clock hours.
- Keep the TIME button (1) pressed. Then press the MIN button (8) repeatedly to set the minutes. You can also keep the MIN button (8) pressed down to accelerate the digit adjustment.
- Release the TIME button (1) after the clock has been set correctly.

Setting the Alarm Clock

Verify that the clock displays the correct time. The alarm time can only be set while the device is powered off. If it is still powered on, power the device off by using the volume control knob (7).

- Press and hold the Alarm button (9).
- Then press the HOUR button (10) repeatedly to set the hours of the alarm time. You can also keep the HOUR button (10) pressed down to accelerate the digit adjustment. To distinguish ante meridian (morning) and post meridian (afternoon) time, "PM" will display for post meridian clock hours.
- Keep the Alarm button (9) pressed. Then press the MIN button (8) repeatedly to set the minutes of the alarm time. You can also keep the MIN button (8) pressed down to accelerate the digit adjustment.
- Release the Alarm button (9) after the alarm clock has been set correctly.

Enabling the Alarm

After the desired alarm time has been set, you can enable the alarm as follows:

- Press the AL ON button (4). The alarm icon will show on the display (5).
- To disable the alarm, press the AL ON button (4) again. The alarm icon will disappear from the display (5).
- A repetitive sound will be heard at the time of the set alarm. To disable the alarm sound, press the AL ON button (4).

Appendix

Copyright

The entire content of this User's Manual is copyrighted and is provided to the reader for information purposes only.

Copying data and information without the prior written and explicit authorization from the author is strictly forbidden. This also applies to any commercial use of the contents and information.

All texts and figures are up-to-date as per the date of print release.

Technical Specifications

Scanradio	
Operating Environment	5 °C to 35 °C, max. 85 % RH
Operating voltage	3 V
Battery Type	1.5 V, AAA-size
Power consumption	45 mW
Operating time	approx. 65 h
Frequency range	87,5 - 108 MHz
Dimensions	75 x 32 x 21 mm (W x H x D)
Weight	27 g (without batteries)
Max. output voltage on headphones jack	approx. 30 mV

Scanradio SUSR 17 A1

Max. sound pressure level with supplied headphones SUSR 17 A1	75 dB(A)
Nominal voltage for supplied headphones SUSR 17 A1	170 mV

The technical details about the frequency band describe the technical characteristics of your device.

Different national regulations may apply in different countries regarding the frequency bands that are free for public use. Any information received from frequency bands located outside those that are explicitly free for public use may not be used, nor may its contents be forwarded to any third parties.

Details of Guarantee

**36 month warranty
from date of purchase**



UK

Important warranty information

SILVERCREST®

Dear Customer,

Thank you for purchasing a Silvercrest product.

We ask you to read carefully through the enclosed documentation or online help before putting your Silvercrest product into service. If you have a problem, which can not be solved in this way, please contact our hotline.

In case that trouble solving over the telephone is not possible, our hotline will arrange the service depending on the fault of the device. This will contain the elimination of defects by production and material at no charge.

Up-to-date information and answers to the most frequently asked questions are available on the internet from: www.silvercrest.cc

This guarantee is valid in United Kingdom.

Your statutory guarantees from the seller are in addition to this warranty and are not limited by it.

36
month warranty

Hotline number

0207 - 36 50 744

(Please have your serial number at hand!)



Manufacturer:

TARGA GmbH
Postfach 22 44
D-59482 Soest
www.silvercrest.cc

**36 month warranty
from date of purchase**



Ireland

***Important
warranty information***

SILVERCREST®

Dear Customer,

Thank you for purchasing a Silvercrest product.

We ask you to read carefully through the enclosed documentation or online help before putting your Silvercrest product into service. If you have a problem, which can not be solved in this way, please contact our hotline.

In case that trouble solving over the telephone is not possible, our hotline will arrange the service depending on the fault of the device. This will contain the elimination of defects by production and material at no charge.

Up-to-date information and answers to the most frequently asked questions are available on the internet from: www.silvercrest.cc

This guarantee is valid in Ireland.

Your statutory guarantees from the seller are in addition to this warranty and are not limited by it.

36
month warranty

Hotline number

01 - 242 15 83

(Please have your serial number at hand!)



Manufacturer:

TARGA GmbH
Postfach 22 44
D-59482 Soest
www.silvercrest.cc

Sisältö


Pakkauksen sisältö.....	22
Yleistä.....	23
Tärkeä turvallisuutta koskeva huomautus	25
Paristot.....	25
Lapset	27
Käyttöympäristö	27
Ylläpito ja huolto	27
Käyttötarkoitus	28
Voimakkaasta äänestä aiheutuva vaara.....	29
Vaatimustenmukaisuus.....	29
Vanhojen laitteiden hävittäminen.....	30
Johdanto.....	31
Paristojen asentaminen	31
Kuulokkeiden liittäminen	31
Laitteen käyttö	32
Virran kytkeminen ja äänenvoimakkuuden säätö	32
Radioaseman virittäminen	32
Ajan asettaminen	33
Herätyskellon asettaminen	34
Herätyskellon aktivointi	35
Liite	36
Tekijänoikeudet.....	36
Tekniset tiedot	36
Takuuehdot.....	38

Pakkauksen sisältö




- 1 Scanradio SUSR 17 A1 ja hihna
- 2 Kuulokkeet
- 3 2 akkua (1,5 V, koko AAA)
- 4 Käyttöopas ja huolto-ohjeet
(ei kuvassa)

 Yleistä

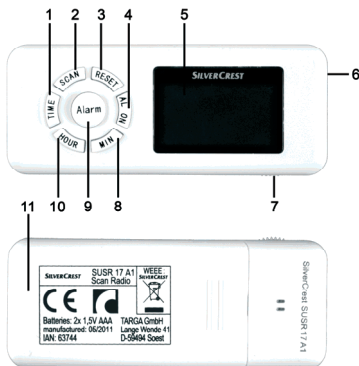

 - 1 TIME (AIKA) (ajan asetus)
- 2 SCAN (HAKU) (radioasemien haku)
- 3 RESET (NOLLAUS) (laitteen nollaus)
- 4 AL ON (hälytyksen käyttöönotto / käytöstä poisto)
- 5 Näyttö
- 6 Kuulokeliitin (sivussa)
- 7 Virtapainike ja äänenvoimakkuuden säätö
- 8 MIN (minuuttien asetus)
- 9 Alarm (HÄL) (hälytyksen asetus)
- 10 HOUR (TUNNIT) (tuntien asetus)
- 11 Akkulokero (takapaneeli)

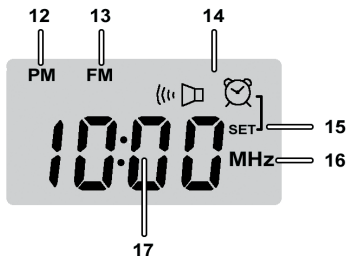

- 12 Jälkeen puolenpäivän, kello ja herätys
- 13 Radiotila
- 14 Herätys käytössä
- 15 Herätyksen ajastustila
- 16 Radion taajuusalue
- 17 Kellon ja herätyksen ajanäyttö

Tärkeä turvallisuutta koskeva huomautus



Tämä kuvake tarkoittaa tärkeitä tuotteen ja käyttäjän turvallisuutta koskevia tietoja.



Tämä kuvake tarkoittaa lisätietoja aiheesta.

Ennen kuin käytät laitetta ensimmäistä kertaa, lue seuraavat huomautukset tästä käyttöohjeesta ja noudata kaikkia varoituksia, vaikka olisitkin tottunut käyttämään sähkölaitteita. Säilytä tämä käyttöopas myöhempää käyttöä varten. Jos myyt laitteen tai luovutat sen eteenpäin, on tärkeää, että annat mukana myös tämän käyttöoppaan.



Paristot

Aseta paristot tai akut paikalleen oikein päin. Älä yritä ladata tavallisia paristoja äläkä koskaan avaa akkua tai paristoa. Älä hävitä akkuja tai paristoja polttamalla, sillä ne voivat räjähtää. Älä käytä sekaisin uusia ja vanhoja tai eri tyyppisiä paristoja. Jos laitetta ei tulla käyttämään pitkään aikaan, poista sen akut/paristot ja säilytä laitetta kuivassa ja pölyttömässä paikassa. Väärinkäyttö voi aiheuttaa räjähdyksen tai paristovuodon. Jos paristot

vuotavat, puhdista laite huolellisesti kuivalla rievulla suojakäsineet kädessä.



Huolehdi,

- ettei laitetta säilytetä lämmönlähteiden (esim. lämmityslaitteen) lähellä.
- että laite on suojassa suoralta auringonvalolta ja kirkkaalta sähkövalolta.
- että laite on suojassa tippuvalta tai roiskuvalta vedeltä ja muilta nesteiltä. Älä käytä sitä aivan veden läheisyydessä. Laitetta ei saa upottaa veteen. Älä sijoita nesteitä sisältäviä astioita (kuten maljakoita tai juomalaseja) laitteen päälle tai läheisyyteen.
- ettei laitetta sijoiteta magneettikenttien (esim. kaiuttimien) välittömään läheisyyteen.
- ettei laitetta sijoiteta avotulen (esim. palavan kynttilän) lähelle.
- ettei laitteeseen työnnetä vieraita esineitä.
- ettei laite altistu suurille lämpötilan muutoksille, jotka voivat aiheuttaa kosteuden kondensoitumista ja oikosulun.
- että laite on suojassa kovilta kolhuilta ja tärinältä.



Lapset

Sähkölaitteet eivät kuulu lasten käsiin! Älä anna lasten käyttää sähkölaitteita ilman valvontaa. Lapset eivät ehkä ymmärrä mahdollisia vaaratekijöitä. Pienet osat saattavat aiheuttaa tukehtumisvaaran. Myös pakkausmateriaalit voivat aiheuttaa tukehtumisvaaran, joten älä jätä niitä lasten käsiin. Akut ja ladattavat paristot saattavat aiheuttaa tukehtumisvaaran. Pidä akut ja paristot pois lasten ulottuvilta. Ota välittömästi yhteyttä lääkäriin, jos akku tai paristo on nieltty.

Käyttöympäristö

Laitetta ei ole tarkoitettu käytettäväksi ympäristöissä, joissa on korkea lämpötila tai kosteus (esim. kylpyhuone), ja se on pidettävä pölyttömänä. Käyttölämpötila ja -ilmankosteus: 5 °C – 35 °C, maks. 85 % suhteellinen kosteus.

Ylläpito ja huolto

Laite on toimitettava huoltoon, jos se on millään tavalla vahingoittunut, esimerkiksi jos laitekotelo on vaurioitunut, laitteeseen on joutunut nestettä tai jokin vieras esine tai laite on altistunut sateelle tai kosteudelle. Huoltoa tarvitaan myös silloin, kun laite ei toimi normaalisti tai jos se on pudonnut. Jos laitteesta tulee savua tai epätavallista hajua tai ääntä, katkaise virta välittömästi. Tällöin laitetta ei saa enää käyttää, ja valtuutetun huollon on tarkastettava se. Ota yhteys

valtuutettuun huoltoliikkeeseen, kun huoltoa tarvitaan. Älä avaa laitteen koteloä itse. Käytä puhdistamiseen puhdasta, kuivaa liinaa. Älä käytä syövyttäviä nesteitä. Älä yritä avata laitteen koteloä, koska se aiheuttaa takuun raukeamisen.

Käyttötarkoitus

Tämä on kotikäyttöön tarkoitettu sähkölaitte. Se on suunniteltu radiolähetysten vastaanottamiseen. Kamera on tarkoitettu ainoastaan yksityiskäyttöön, ei teolliseen tai kaupalliseen käyttöön. Laitte ei sovellu käytettäväksi trooppisessa ilmastossa. Laitteessa saa käyttää ainoastaan laitteen turvastandardien ja sähkömagneettisen yhteensopivuuden ja suojausvaatimusten mukaisia johtoja ja lisälaitteita. Tämä laite täyttää kaikki CE-vaatimustenmukaisuuslausekkeen ehdot ja standardit. Jos laitteeseen tehdään muita kuin valmistajan suosittelemia muutoksia, edellä esitettyjen määräysten vaatimukset eivät ehkä enää täyty. Valmistaja ei ole vastuussa mistään valtuuttamattomista muutoksista aiheutuneista vahingoista tai häiriöistä. Käytä vain valmistajan suosittelemia lisälaitteita. Jos laitetta käytetään muualla kuin Saksassa, noudata käyttömaan määräyksiä.

Voimakkaasta äänestä aiheutuva vaara



Ole varovainen käyttäessäsi kuulokkeita. Kuuntelu suurilla äänenvoimakkuuksilla voi vahingoittaa kuuloa.

Vaatimustenmukaisuus



Tämä laite on EMC-direktiivin 2004/108/EC perusvaatimusten ja muiden asiaankuuluvien vaatimusten mukainen.

Lisätietoja tämän laitteen vaatimustenmukaisuuslausekkeesta on osoitteessa www.service.targa.co.uk. Allekirjoitettu vaatimustenmukaisuuslauseke löytyy myös tämän käyttöoppaan lopussa.

Vanhojen laitteiden hävittäminen



Jos tuotteessa on päälle ruksattu roskakori, sitä koskee eurooppalainen ohje 2002/96/EC.



Kaikki sähkö- ja elektroniikkalaitteet on hävitettävä erillään talousjätteistä julkisissa käsittelylaitoksissa. Vanhojen laitteiden oikealla hävittämisellä estät vahingot ympäristölle ja omalle terveydellesi. Lisätietoja oikeasta hävitystavasta saa viranomaisilta, kierrätyspisteistä tai myymälästä, josta laite on ostettu.

Pidä huoli ympäristöstä. Loppuun käytetyt paristot eivät kuulu kotitalousjätteisiin. Ne on vietävä käytettyjen akkujen ja paristojen keräyspisteeseen.

Kierrätä myös pakkausmateriaali oikein. Pahviset pakkauslaatikot voidaan viedä paperinkierrätysastioihin tai julkisiin kierrätyspisteisiin. Pakkauksen sisältämät kalvot ja muovit kuuluvat julkisiin keräyspisteisiin.

Johdanto

Kiitämme SilverCrest-tuotteen valinnasta.

Tämä scan radio mahdollistaa helpon ja kätevän tavan kuunnella radiota. Yhden kosketuksen painiketoiminnolla voit helposti vaihtaa seuraavaan kuuluvuusalueella olevaan asemaan.

Paristojen asentaminen

Aseta mukana toimitetut paristot lokeroon. Avaa laitteen takapaneelissa olevan akkukotelon kansi liu'uttamalla sitä painetun nuolen suuntaan. Aseta paristot paikalleen navat oikeisiin suuntiin (+ ja -). Oikea napaisuus on merkitty paristoihin ja paristolokeron sisälle. Sulje sen jälkeen paristolokeron kansi.

Jos äänenvoimakkuus heikkenee tai laite ei vastaa, vaihda paristot uusiin samantyyppisiin paristoihin. Laite ei ilmoita loppuun kuluneista paristoista.

Kuulokkeiden liittäminen

Aseta mukana toimitettujen kuulokkeiden jakkiliitin kuulokepistokkeeseen (6) laitteen sivupaneelissa.

Laitteen käyttö

Virran kytkeminen ja äänenvoimakkuuden säätö

- Käännä äänenvoimakkuuden valitsinta (7) vastapäivään radion virran päälle kytkemiseksi. Samalla säädät äänenvoimakkuutta. Käännä äänenvoimakkuuden säädintä vastapäivään halutessasi nostaa äänen voimakkuutta, tai käännä sitä myötäpäivään, jos haluat laskea äänenvoimakkuutta.
- Käännä äänenvoimakkuuden säädintä mahdollisimman pitkälle myötäpäivään laitteen sammuttamiseksi.

Radioaseman virittäminen



Radioasemien vastaanottamiseksi mukana toimitetut kuulokkeet on liitettävä kuulokeliitäntään. Kuulokkeiden johto toimii antennina.

- Säädä ääni halutulle tasolle äänenvoimakkuuden säätöpainikkeella (7).
- Käynnistä automaattinen asemahaku painamalla SCAN-painiketta (2). Heti kun asema on löydetty haku päättyy ja radio-ohjelmaa voi kuunnella.
- Uudelle kanavalle vaihdetaan painamalla uudelleen SCAN-painiketta (2) . Seuraava kuuluva asema haetaan.

- Haku suoritetaan aina taajuuskaistan loppuun saakka. Haun voi aloittaa taajuuskaistan alusta painamalla RESET-painiketta (3).

Ajan asettaminen

Aika voidaan asettaa vain laitteen ollessa pois päältä. Jos laitteessa on vielä virta kytkettynä, sammuta laite äänenvoimakkuudensäätimellä (7).

- Pidä TIME-painiketta (1) painettuna.
- Aseta sen jälkeen tunnit painamalla toistuvasti HOUR-painiketta (10). Voit myös pitää HOUR-painiketta (10) painettuna nopeuttaaksesi numeroiden asettamista. Jotta näkyisi ero aamupäivä- ja iltapäiväaikojen välillä, näytössä näkyy "PM" osoittamassa iltapäiväaikaa.
- Pidä TIME-painiketta (1) painettuna. Aseta sen jälkeen minuutit painamalla toistuvasti MIN-painiketta (8). Voit myös pitää MIN-painiketta (8) painettuna nopeuttaaksesi numeroiden asettamista.
- Vapauta TIME-painike (1), kun kello on asetettu oikeaan aikaan.

Herätyskellon asettaminen

Tarkista, että kellonaika on oikea. Herätyskello voidaan asettaa vain laitteen ollessa pois päältä. Jos laitteessa on vielä virta kytkettynä, sammuta laite äänenvoimakkuudensäätimellä (7).

- Pidä Alarm-painiketta (9) painettuna.
- Aseta sen jälkeen herätysajan tunti painamalla toistuvasti HOUR-painiketta (0). Voit myös pitää HOUR-painiketta (10) painettuna nopeuttaaksesi numeroiden asettamista. Jotta näkyisi ero aamupäivä- ja iltapäiväaikaisten välillä, näytössä näkyy "PM" osoittamassa iltapäiväaikaa.
- Pidä Alarm-painiketta (9) painettuna. Aseta sen jälkeen herätysajan minuutit painamalla toistuvasti MIN-painiketta (8). Voit myös pitää MIN-painiketta (8) painettuna nopeuttaaksesi numeroiden asettamista.
- Vapauta Alarm-painike (9), kun herätyskello on asetettu oikeaan aikaan.

Herätyskellon aktivointi

Asetettuasi oikean herätysajan voit aktivoida herätyskellon seuraavasti:

- Paina AL ON-painiketta (4). Herätyskellokuvake tulee näyttöön (5).
- Voit sammuttaa herätyskellon painamalla AL ON-painiketta (4) uudelleen. Herätyskellokuvake poistuu näytöstä (5).
- Asetetun hälytyksen aikana kuuluu toistuva äänimerkki. Voit sammuttaa herätyskellon painamalla AL ON-painiketta (4).

Liite

Tekijänoikeudet

Kaikki tämän käyttöoppaan tiedot ovat tekijänoikeuksien suojaamia, ja ne on annettu lukijalle vain tiedoksi.

Datan ja tietojen kopioiminen on ehdottomasti kiellettyä ennen tekijän antamaa kirjallista ja nimenomaista valtuutusta. Tämä koskee myös kaikkea sisällön ja tietojen kaupallista käyttöä.

Kaikki tekstit ja kuvat ovat ajan tasalla painatuspäivänä.

Tekniset tiedot

Scanradio	
Käyttöympäristö	5–35 °C, suht. kosteus enintään 85 %
Käyttöjännite	3 V
Paristotyyppi	1,5 V, AAA-koko
Virrankulutus	45 mW
Toiminta-aika	noin 65 tuntia
Taajuusalue	87,5 - 108 MHz
Ulkomitat	75 x 32 x 21 mm (l x k x s)
Paino	27 g (ilman paristoja)
Kuulokkeiden enimmäislähtöjännite	noin 30 mV
Maksimiäänenvoimakkuus mukana toimitetuilla kuulokkeilla SUSR 17 A1	75 dB(A)

Mukana toimitettujen kuulokkeiden SUSR 17 A1 nimellisjännite	170 mV
--	--------

Taajuuskaistan tekniset tiedot kuvaavat laitteen teknisiä ominaisuuksia.

Vapaassa käytössä olevien kaistojen käyttöön voidaan eri maissa soveltaa erilaisia kansallisia säädöksiä. Mitään tietoja, jotka on vastaanotettu taajuuskaistoista, jotka sijaitsevat nimenomaisesti vapaitten julkiseen käyttöön tarkoitettujen kaistojen ulkopuolella, ei voi käyttää tai eikä niiden sisältöä voi välittää eteenpäin millekään kolmannelle osapuolelle.

Takuuehdot

**36 kuukauden takuu
ostopäivämäärästä alkaen**



Finland

Tärkeitä takuuhjeita

SILVERCREST®

Arvoisa asiakas,

kiitos! Meitä ilahduttaa, että olet valinnut SilverCrest-tuotteen.

Lukekaa SilverCrest tuotteen käyttöohjeet huolellisesti ennen laitteen käyttöönottoa. Jos laitteen käytössä ilmenee häiriöitä joita ette itse pysty poistamaan, pyydämme ottamaan yhteyttä tuotetukeemme.

Jos laitteessa ilmennyt ongelmaa ei pystytä ratkaisemaan puhelimitse, tuotetukemme päättää valmistus- tai materiaalivirheen korjaamiseen tarvittavasta jatkotoimenpiteestä.

Ajankohtaisia tietoja ja vastauksia useimmiten esitettyihin kysymyksiin löydät Internetistä osoitteesta: www.silvercrest.cc

Tämä takuu pätee Suomessa.

Myyntiliikkeeltä vaadittavat lakisääteiset takuusuoritukset ovat voimassa tämän takuun rinnalla eikä tämä takuu rajoita näitä oikeuksia.

36
month warranty

Tuotetuen puhelinnumero

09 - 693 797 00

(Ottakaa laitteen sarjanumero valmiiksi esille!)



Valmistaja:

TARGA GmbH
Postfach 22 44
D-59482 Soest
www.silvercrest.cc



EC-Declaration of Conformity

Address: Targa GmbH
Lange Wende 41
59494 Soest, Germany

Brand: SilverCrest
Product: Scan Radio
Model: SUSR 17 A1

The product complies with the requirements of the following European directives:

2004/108/EC Electromagnetic Compatibility

Compliance was proved by the application of the following standards:

EMC: EN 55013: 2001 + A1: 2003 + A2: 2006
EN 55020: 2007

Year of CE marking: 2011

Soest, 14th of Feb 2011

Matthias Klauke, Managing Director